

# 2A Alerter Quickstart User Guide

## Cards for Fire Services

The following quickstart user guide cards are for example purposes only. The 2A alerter's options will be dependent upon programming settings which should be evaluated prior to installation and commissioning. These cards clearly show the simplicity of operating a 2A alerter and should be customised according to individual fire service requirements.

Unit 5, Glebe Close Farm,  
Cublington Road,  
Wing, Leighton Buzzard,  
Bedfordshire. LU7 0LB.

Telephone: 01296 682552  
Facsimile: 01296 682551  
Email: info@datanet.org.uk  
Website: http://www.datanet.org.uk

### DATANET ALERTER 2A OPERATING INSTRUCTIONS

BATTERY INSTALLATION & TESTING		LIGHTS				TONE TYPE	VIBRATE	DURATION
		A	B	C	D			
Fit battery	All lights illuminate and vibrate three times.	●	●	●	●	3 Bleeps	Yes	3 Seconds
To confirm alerter status	Press and release button. Green light shows and bips to indicate normal standby operating mode. Alerter is ready to receive calls.				●	Bip	No	Bip
If low battery	Automatically double bips every 60 seconds with 'bat' light 'B'. The battery should be replaced.		●			Bip	No	1 Second
To confirm alerter status	Press and release button. If battery is low, red 'bat' and green 'on' lights show and alerter bips. The battery should be replaced.		●		●	Bip	No	1 Second
REFER TO 2A USER GUIDE FOR FURTHER DETAILS OR CONTACT YOUR COMMUNICATIONS DEPARTMENT								

### DATANET ALERTER 2A OPERATING INSTRUCTIONS

WHEN SIGNAL IS RECEIVED		LIGHTS				TONE TYPE	VIBRATE	DURATION
		A	B	C	D			
Call type	FIRE	●	●	●		Constant Dual	Yes	30 seconds
Call type	CO-RESPONDER	●			●	Na-nar, na-nar	Yes	30 seconds
Call type	MARINE INCIDENT			●	●	Constant single	Yes	30 seconds
Call type	TEST / ADMIN				●	Bip	Yes	30 seconds

#### TO ACKNOWLEDGE SIGNAL

Action To cancel, press and release button.

If call not cancelled, after 60 seconds the alerter will send a double prompt bip every 15 seconds to indicate an unread call. Press and release button to retrieve the unread call.

**Important! - User cannot "mute" signal and can only switch the alerter off by removing the battery.**